



# Parts Manual

 
Mfg. No: 122Q72-0121-H1



---

<b>Model Components</b>	<b>Page</b>
Air Cleaner.....	4
Blower Housing, Cover/Guards, Flywheel, Rewind Starter.....	6
Camshaft, Crankshaft, Cylinder, Operator's Manual, Piston/Rings/Connecting Rod, Warning Label.....	8
Carburetor, Carburetor Overhaul Kit.....	10
Controls, Governor Spring, Thermostat.....	12
Cylinder Head, Gasket Set-Valves, Valves.....	14
Exhaust System.....	16
Fuel Supply, Lubrication.....	18
Gasket Set-Engine, Sump.....	20
Ignition.....	22
Replacement Engine.....	24
















Not For  
Reproduction

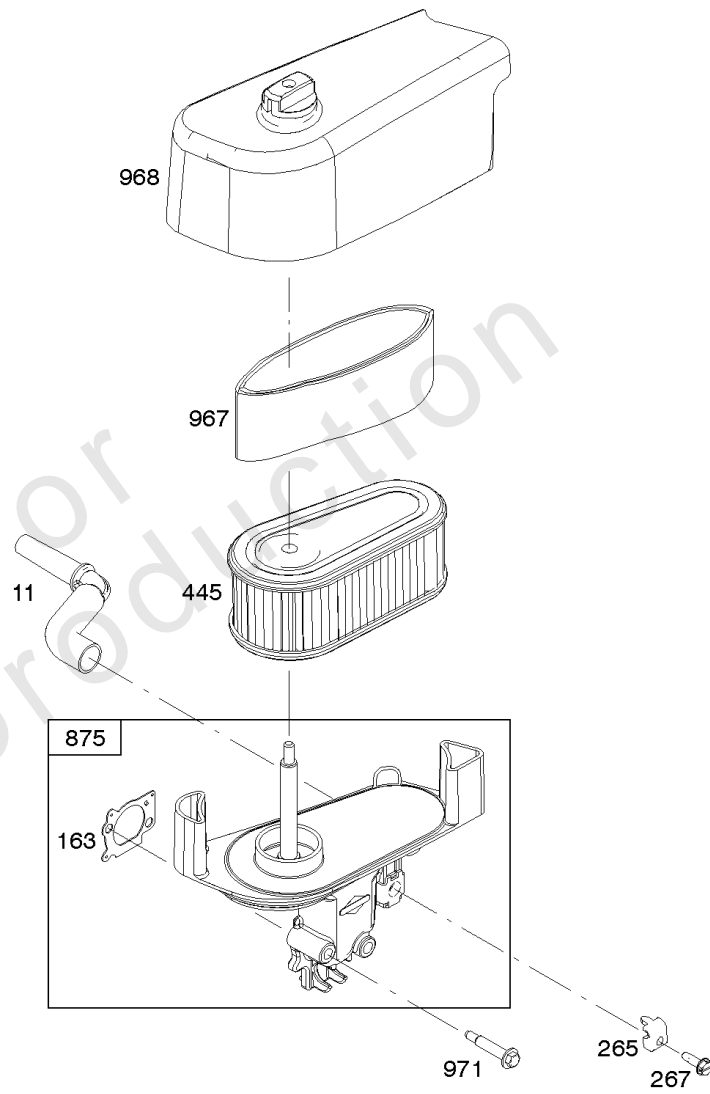

## Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11	796478		Tube-Breather
163	691894		Gasket-Air Cleaner
265	690798		Clamp-Casing
267	691044		SCREW -(Casing Clamp)
445	795066		Filter-A/C Cartridge
875	796492		Base-Air Cleaner
967	796254		Filter-Pre Cleaner
968	796493		Cover-Air Cleaner
971	690349		Screw -(Air Cleaner Base to Carburetor/Throttle Body)

               Not For  
Reproduction

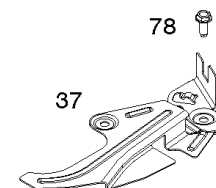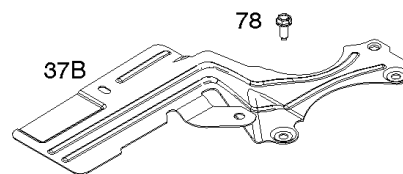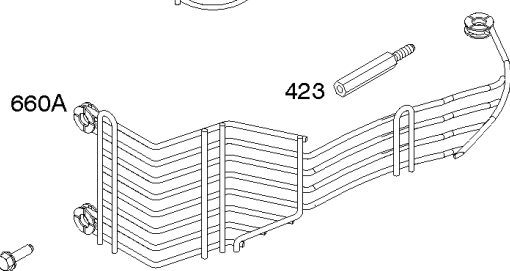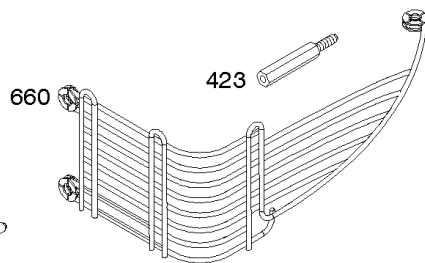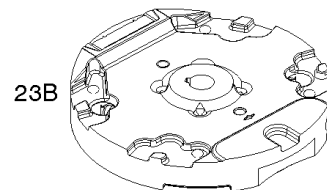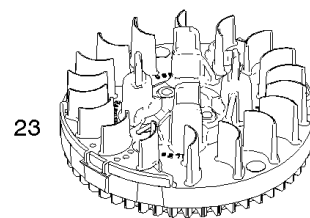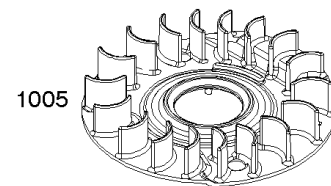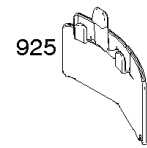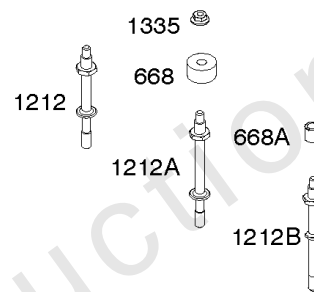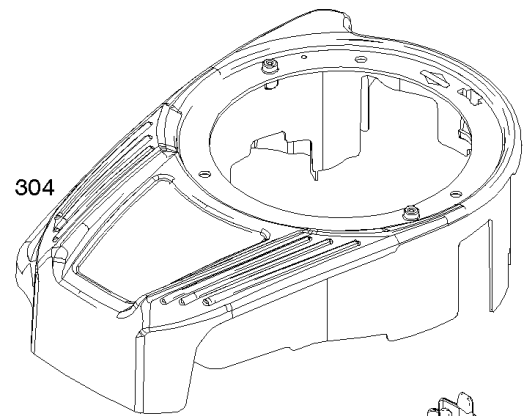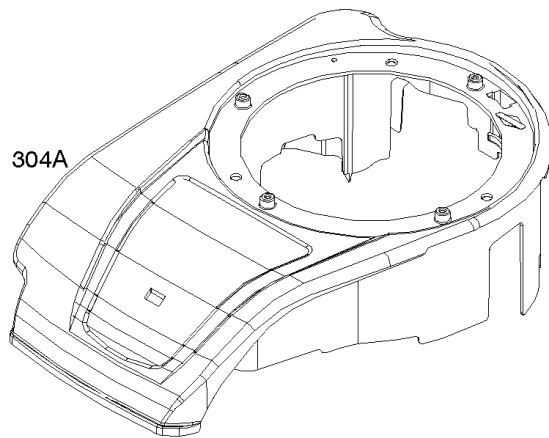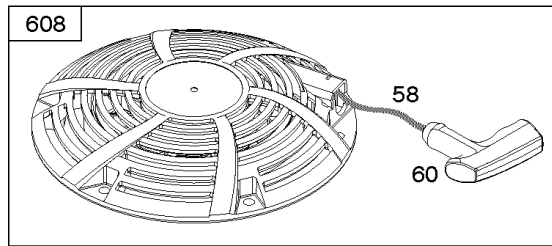

## ***Blower Housing, Cover/Guards, Flywheel, Rewind Starter***

<b>REF NO</b>	<b>PART NO</b>	<b>QTY</b>	<b>DESCRIPTION</b>
23B	796621		Flywheel -(Cast Iron)
37	590921		Guard-Flywheel
37B	799155		Guard-Flywheel
58	697316		Rope-Starter -(Cut To Required Length)
60	281434S		Grip-Starter Rope
60A	799716		Grip-Starter Rope
75	691736		Washer -(Flywheel)
78	793480		SCREW -(Flywheel Guard)
258	794451		Screw -(Control Guard)
304	796692		Housing-Blower -(Rewind Start)
332	690662		Nut -(Flywheel)
363	19069		Puller-Flywheel
423	798322		Stud -(Control Guard)
455	796615		CUP, Flywheel
608	796497		Starter-Rewind
660	798323		Guard-Control
660A	593287		Guard-Control
668	797373		Spacer
668A	797383		Spacer
925	796531		Cover-Linkage
1005	796614		Fan-Flywheel
1212	796537		Stud -(Blower Housing)
1212A	793479		Stud -(Blower Housing)
1212B	797002		Stud -(Blower Housing) (Used With Alternator Only)
1335	793481		Nut -(Blower Housing)

1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.

1319A WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.

 
1330 REPAIR MANUAL

1036 EMISSIONS LABEL

Not For Reproduction

## Camshaft, Crankshaft, Cylinder, Operator's Manual, Piston/Rings/Connecting Rod,


REF NO	PART NO	QTY	DESCRIPTION
1	798947		Cylinder Assembly
3	299819S		SEAL, Oil -(Magneto Side)
16	796924		Crankshaft
24	222698S		KEY, Flywheel
25	591284		Piston Assembly -(Standard)
25	591285		Piston Assembly -(.020" Oversize)
26	591287		Ring Set -(.020" Oversize) -Used After Code Date 11063000
26	797304		Ring Set -(Standard) -Used Before Code Date 11070100
26	797305		Ring Set -(.020" Oversize) -Used Before Code Date 11070100
26	591286		Ring Set -(Standard) -Used After Code Date 11063000
27	691588		Lock-Piston Pin
28	298909		Pin-Piston
29	796470		Rod-Connecting
32	691664		Screw -(Connecting Rod)
32A	695759		Screw -(Connecting Rod)
43	593912		Slinger-Governor/Oil
46	694040		Camshaft
404	690272		WASHER -(Governor Crank)
598	592587		Shim-End Play -(Crankshaft or Camshaft Bearing)
615	690340		RETAINER, Governor Shaft
616	798327		Crank-Governor
718	690959		PIN, Locating
741	797521		Gear-Timing
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1263	697124		REED, Breather
1264	793453		SCREW -(Breather Reed)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	279000		Repair Manual
1375	796476		Cover-Breather Reed
1376	794451		Screw -(Breather Reed Cover)

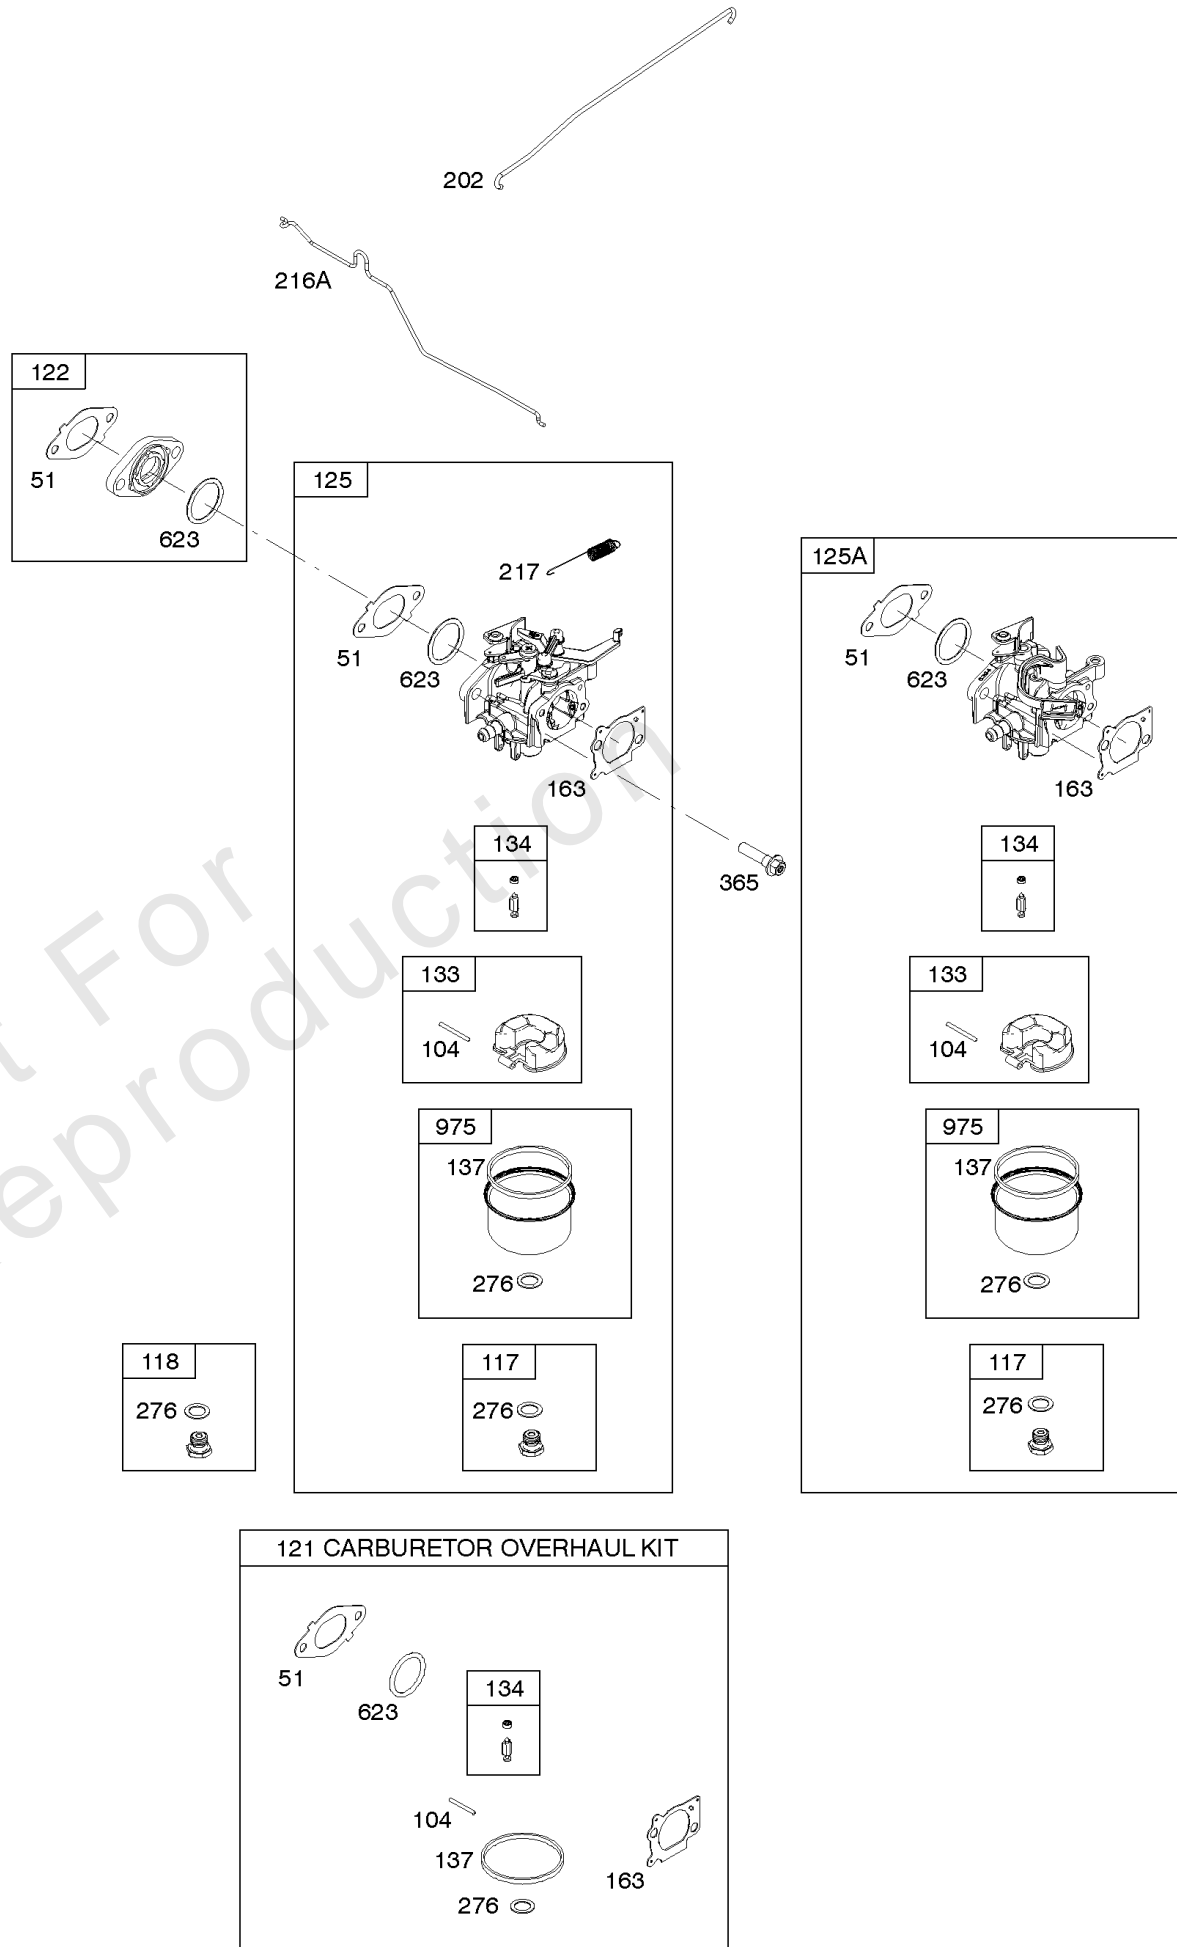

## Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
51	796596		Gasket-Intake
104	797622		Pin-Float Hinge
117	799227		Jet-Main -(Standard)
118	799606		Jet-Main -(High Altitude)
121	592172		Kit-Carburetor Overhaul
122	796595		Spacer-Carburetor
125	799226		Carburetor
133	797626		Float-Carburetor
134	799177		Kit-Needle/Seat
137	797625		Gasket-Float Bowl
163	691894		Gasket-Air Cleaner
202	796657		Link-Mechanical Governor
216A	798944		Link-Choke
217	799179		Spring-Choke Return
276	797632		Washer-Sealing
365	793458		Screw -(Carburetor)
623	793628		Seal-O Ring -(Carburetor Spacer)
975	797631		Bowl-Float

 
Not For  
Reproduction

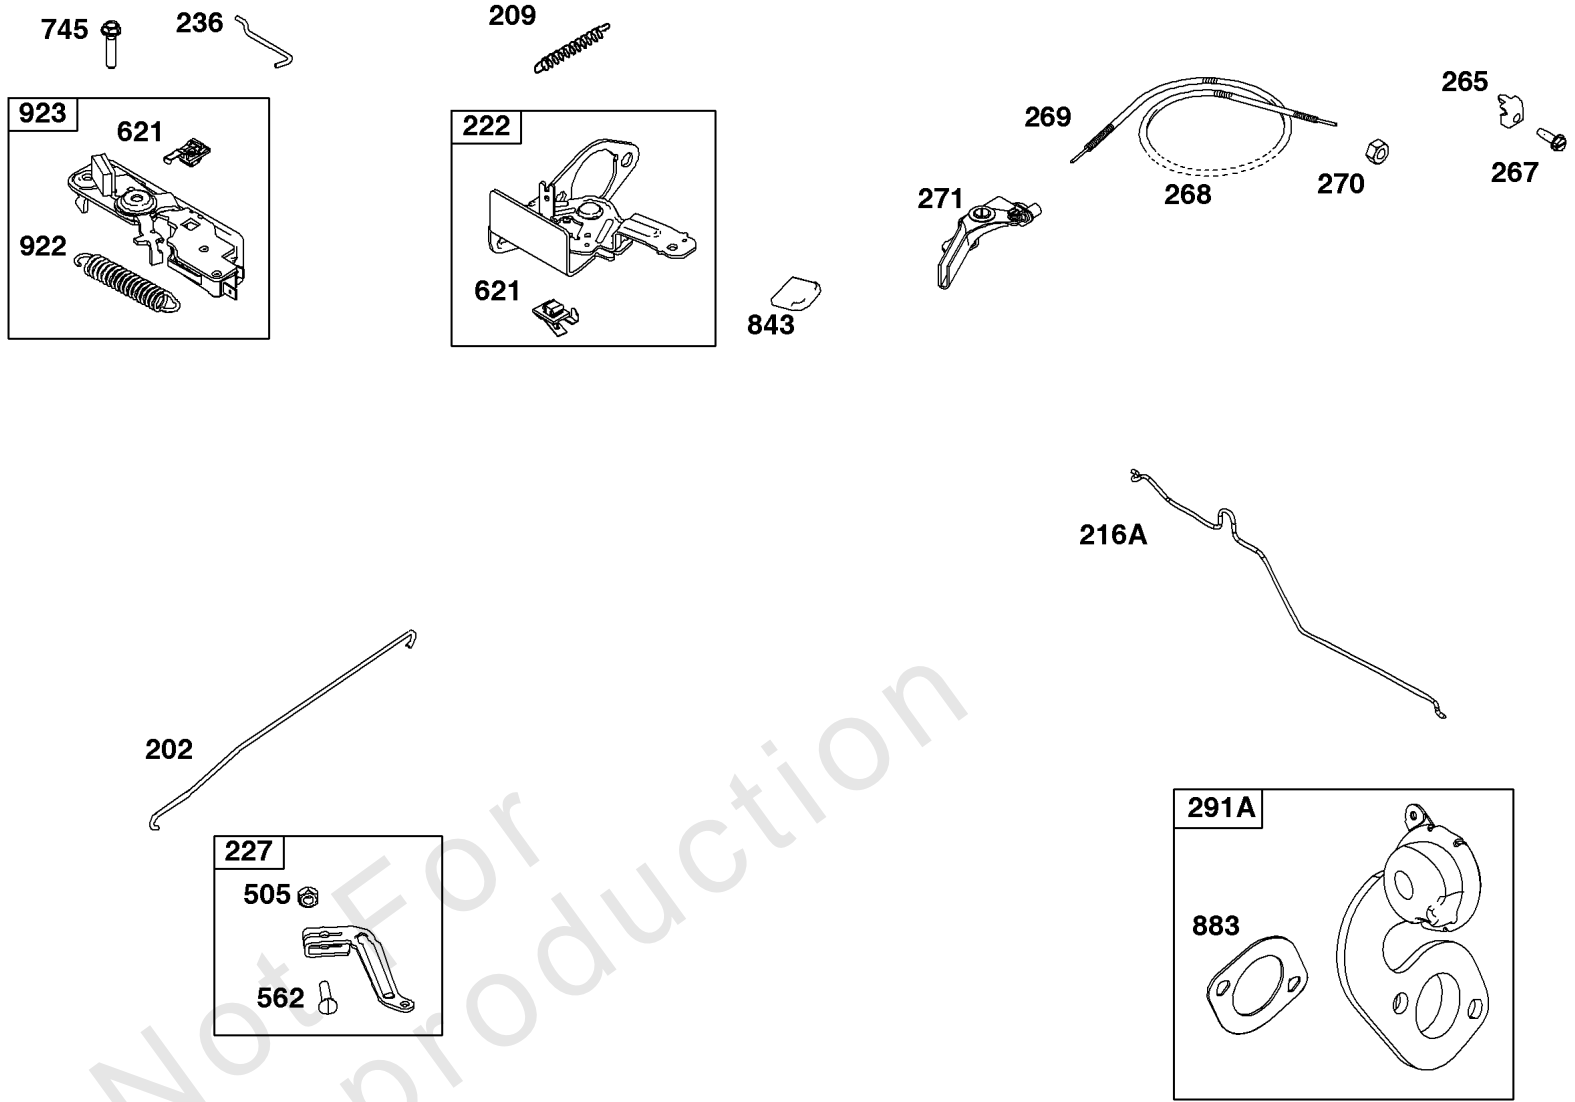

Not For  
Reproduction




## Controls, Governor Spring, Thermostat

 REF NO	PART NO	QTY	DESCRIPTION
202	796657		Link-Mechanical Governor
209	796484		SPRING, Governor
216A	798944		Link-Choke
222	796482		Bracket-Control -(Manual Friction, Remote, & Fixed Speed Control)
227	796487		Lever-Governor Control
236	691826		Link-Lockout
265	690798		Clamp-Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		Lever-Control
291A	798938		Thermostat
505	793515		NUT -(Governor Control Lever)
562	793514		Bolt -(Governor Control Lever)
621	692310		Switch-Stop
745	793491		Screw -(Brake)
843	691884		Sleeve-Lever
883	793497		Gasket-Exhaust
922	692135		Spring-Brake
923	796635		Brake

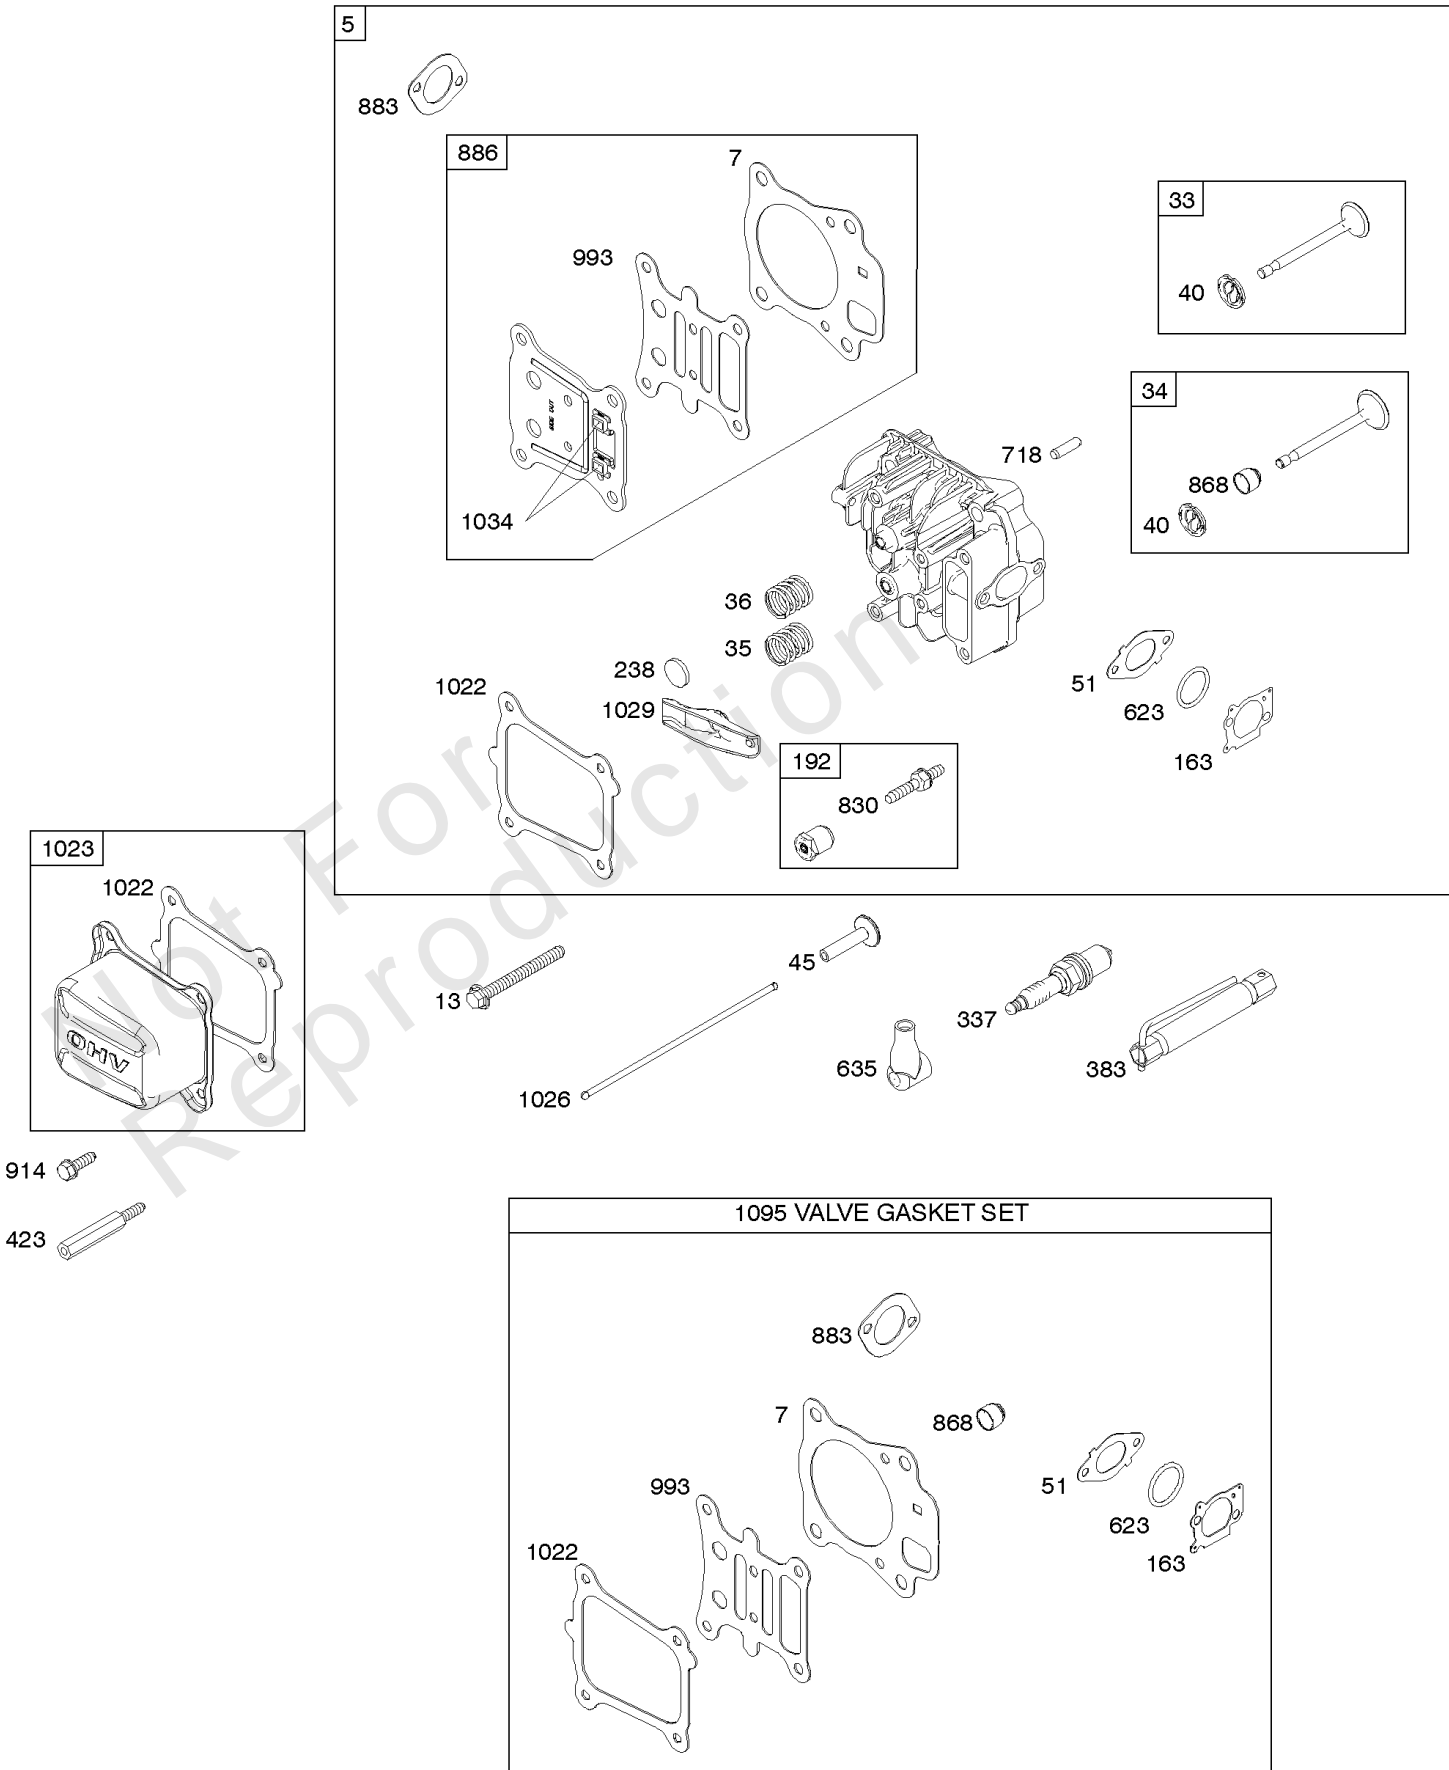

## Cylinder Head, Gasket Set-Valves, Valves




 
 
 
REF NO	PART NO	QTY	DESCRIPTION
5	796471		Head-Cylinder
7	796475		Gasket-Cylinder Head
13	793451		Screw -(Cylinder Head)
33	499642		Valve-Exhaust
34	795443		Valve-Intake
35	691304		Spring-Valve -(Intake)
36	691304		Spring-Valve -(Exhaust)
40	692194		Retainer-Valve
45	690977		TAPPET, Valve
51	796596		Gasket-Intake
163	691894		Gasket-Air Cleaner
192	796631		Adjuster-Rocker Arm
238	691300		Cap-Valve
337	692720		PLUG, Spark -(EMS)
337	692051		Plug-Spark -(Resistor)
383	19576S		WRENCH, Spark Plug
423	798322		Stud -(Control Guard)
623	793628		Seal-O Ring -(Carburetor Spacer)
635	66538S		BOOT, Spark Plug
718	690959		PIN, Locating
830	796472		Stud-Rocker Arm
868	795440		Seal-Valve
883	793497		Gasket-Exhaust
886	799492		Gasket Kit-Cylinder Head/Plate
914	794451		Screw -(Rocker Cover)
993	796473		Gasket-Cylinder Head Plate
1022	796480		Gasket-Rocker Cover
1023	796479		Cover-Rocker
1026	796481		Rod-Push
1029	691230		Arm-Rocker
1034	691343		Guide-Push Rod
1095	592174		Gasket Set-Valve

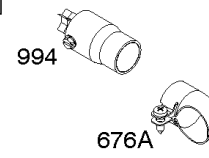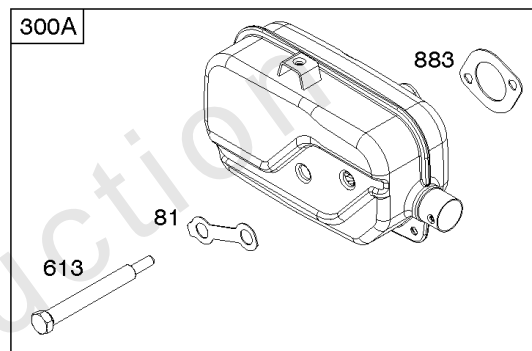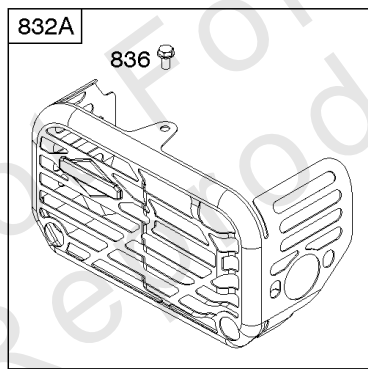

## Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
81	691740		Lock-Muffler Screw
300A	798940		Muffler
613	796496		Screw -(Muffler)
676A	799187		Deflector-Muffler
832A	593411		Guard-Muffler
836	793500		Screw -(Muffler Guard)
837	797735		Spacer-Muffler
883	793497		Gasket-Exhaust
994	690813		Arrestor-Spark

 
 
 
 
 
 
Not For  
Reproduction

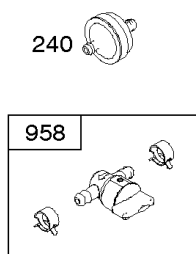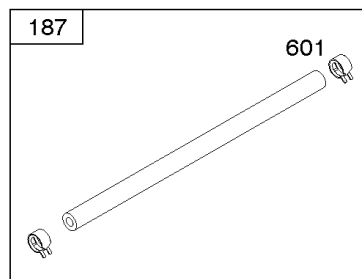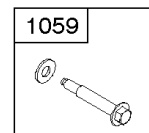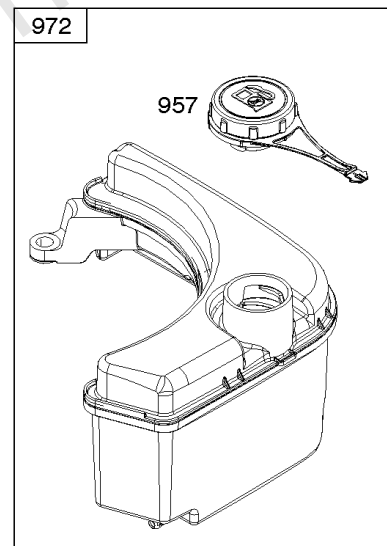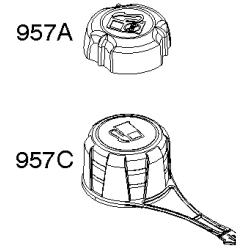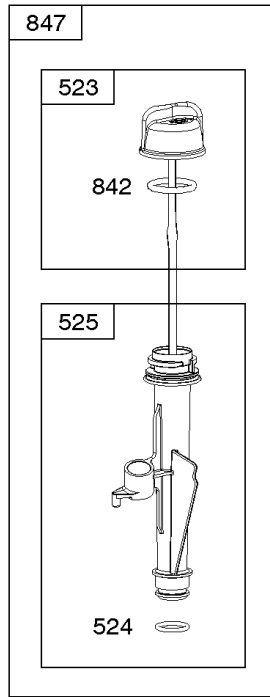

## Fuel Supply, Lubrication


REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(Cut To Required Length)
240	298090S		Filter-Fuel
523	796503		DIPSTICK
524	692296		Seal-Dipstick Tube
525	796502		Tube-Dipstick
601	791850		CLAMP, Hose
670	793485		Spacer-Fuel Tank
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	796501		Dipstick/Tube Assembly
957	799585		Cap-Fuel Tank
957A	692046		Cap-Fuel Tank
957C	796577		Cap-Fuel Tank
958	698183		VALVE, Fuel Shut Off(PLT)
972	590949		Tank-Fuel -(Plastic)
1059	793471		Kit-Screw/Washer

      Not For  
Reproduction

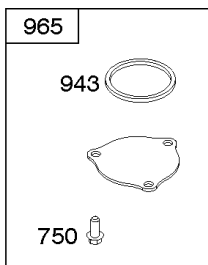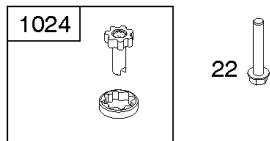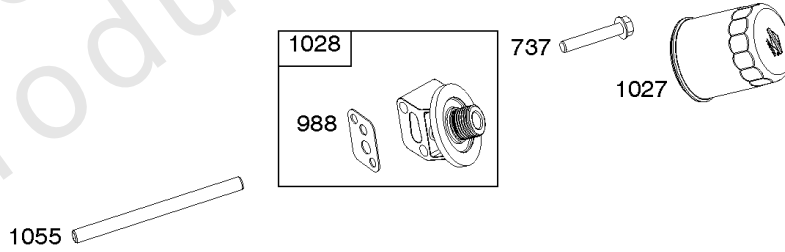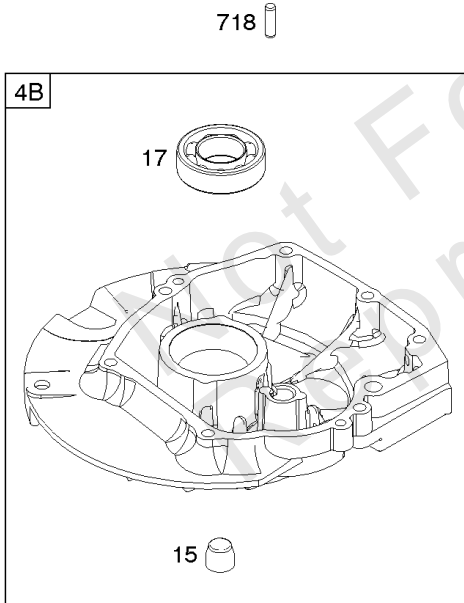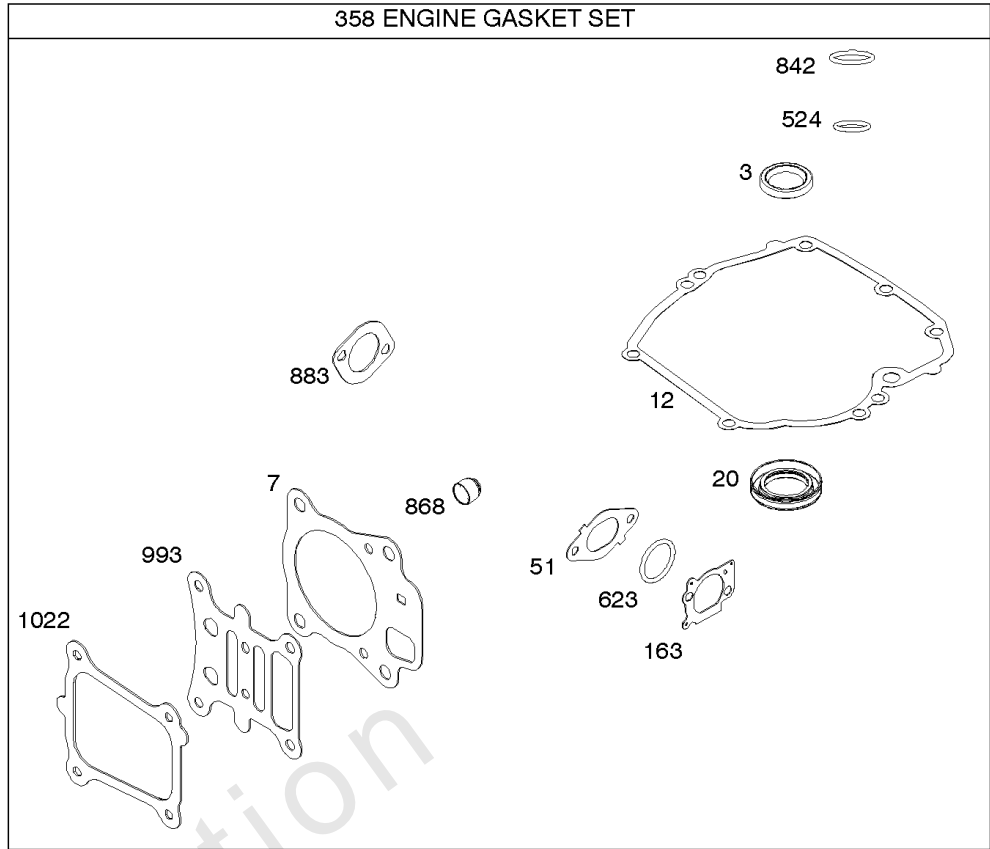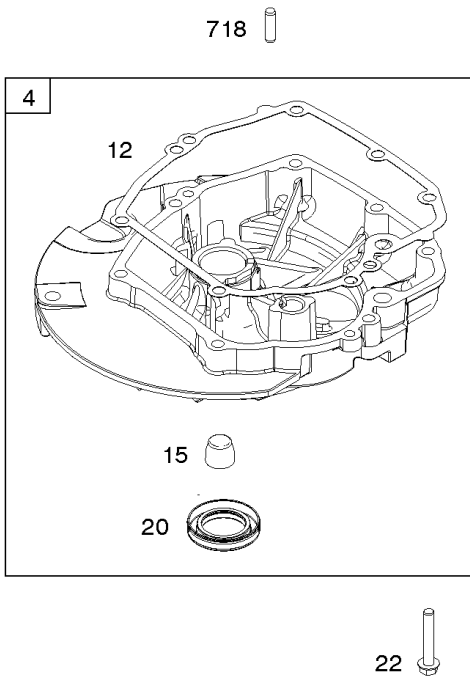

## Gasket Set-Engine, Sump

 REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
4B	592941		Sump-Engine
7	796475		Gasket-Cylinder Head
12	692232		Gasket-Crankcase
15	691680		PLUG, Oil Drain -(Square Socket)
17	798538		Bearing-Ball
20	399781S		Seal-Oil -(PTO Side)
22	691092		Screw -(Crankcase Cover/Sump)
51	796596		Gasket-Intake
163	691894		Gasket-Air Cleaner
358	592173		Gasket Set-Engine
524	692296		Seal-Dipstick Tube
623	793628		Seal-O Ring -(Carburetor Spacer)
718	690959		PIN, Locating
737	692511		Screw -(Oil Filter Adapter)
750	691147		Screw -(Oil Pump Cover)
842	691031		SEAL, O-Ring -(Dipstick Tube)
868	795440		Seal-Valve
883	793497		Gasket-Exhaust
943	692514		Seal-O Ring -(Oil Pump Cover)
965	692507		Cover-Oil Pump
988	692515		Gasket-Oil Adapter
993	796473		Gasket-Cylinder Head Plate
1022	796480		Gasket-Rocker Cover
1024	692508		Pump-Oil
1027	795990		Filter-Oil
1028	796522		Adapter-Oil Filter
1055	796524		Tube-Oil Pump

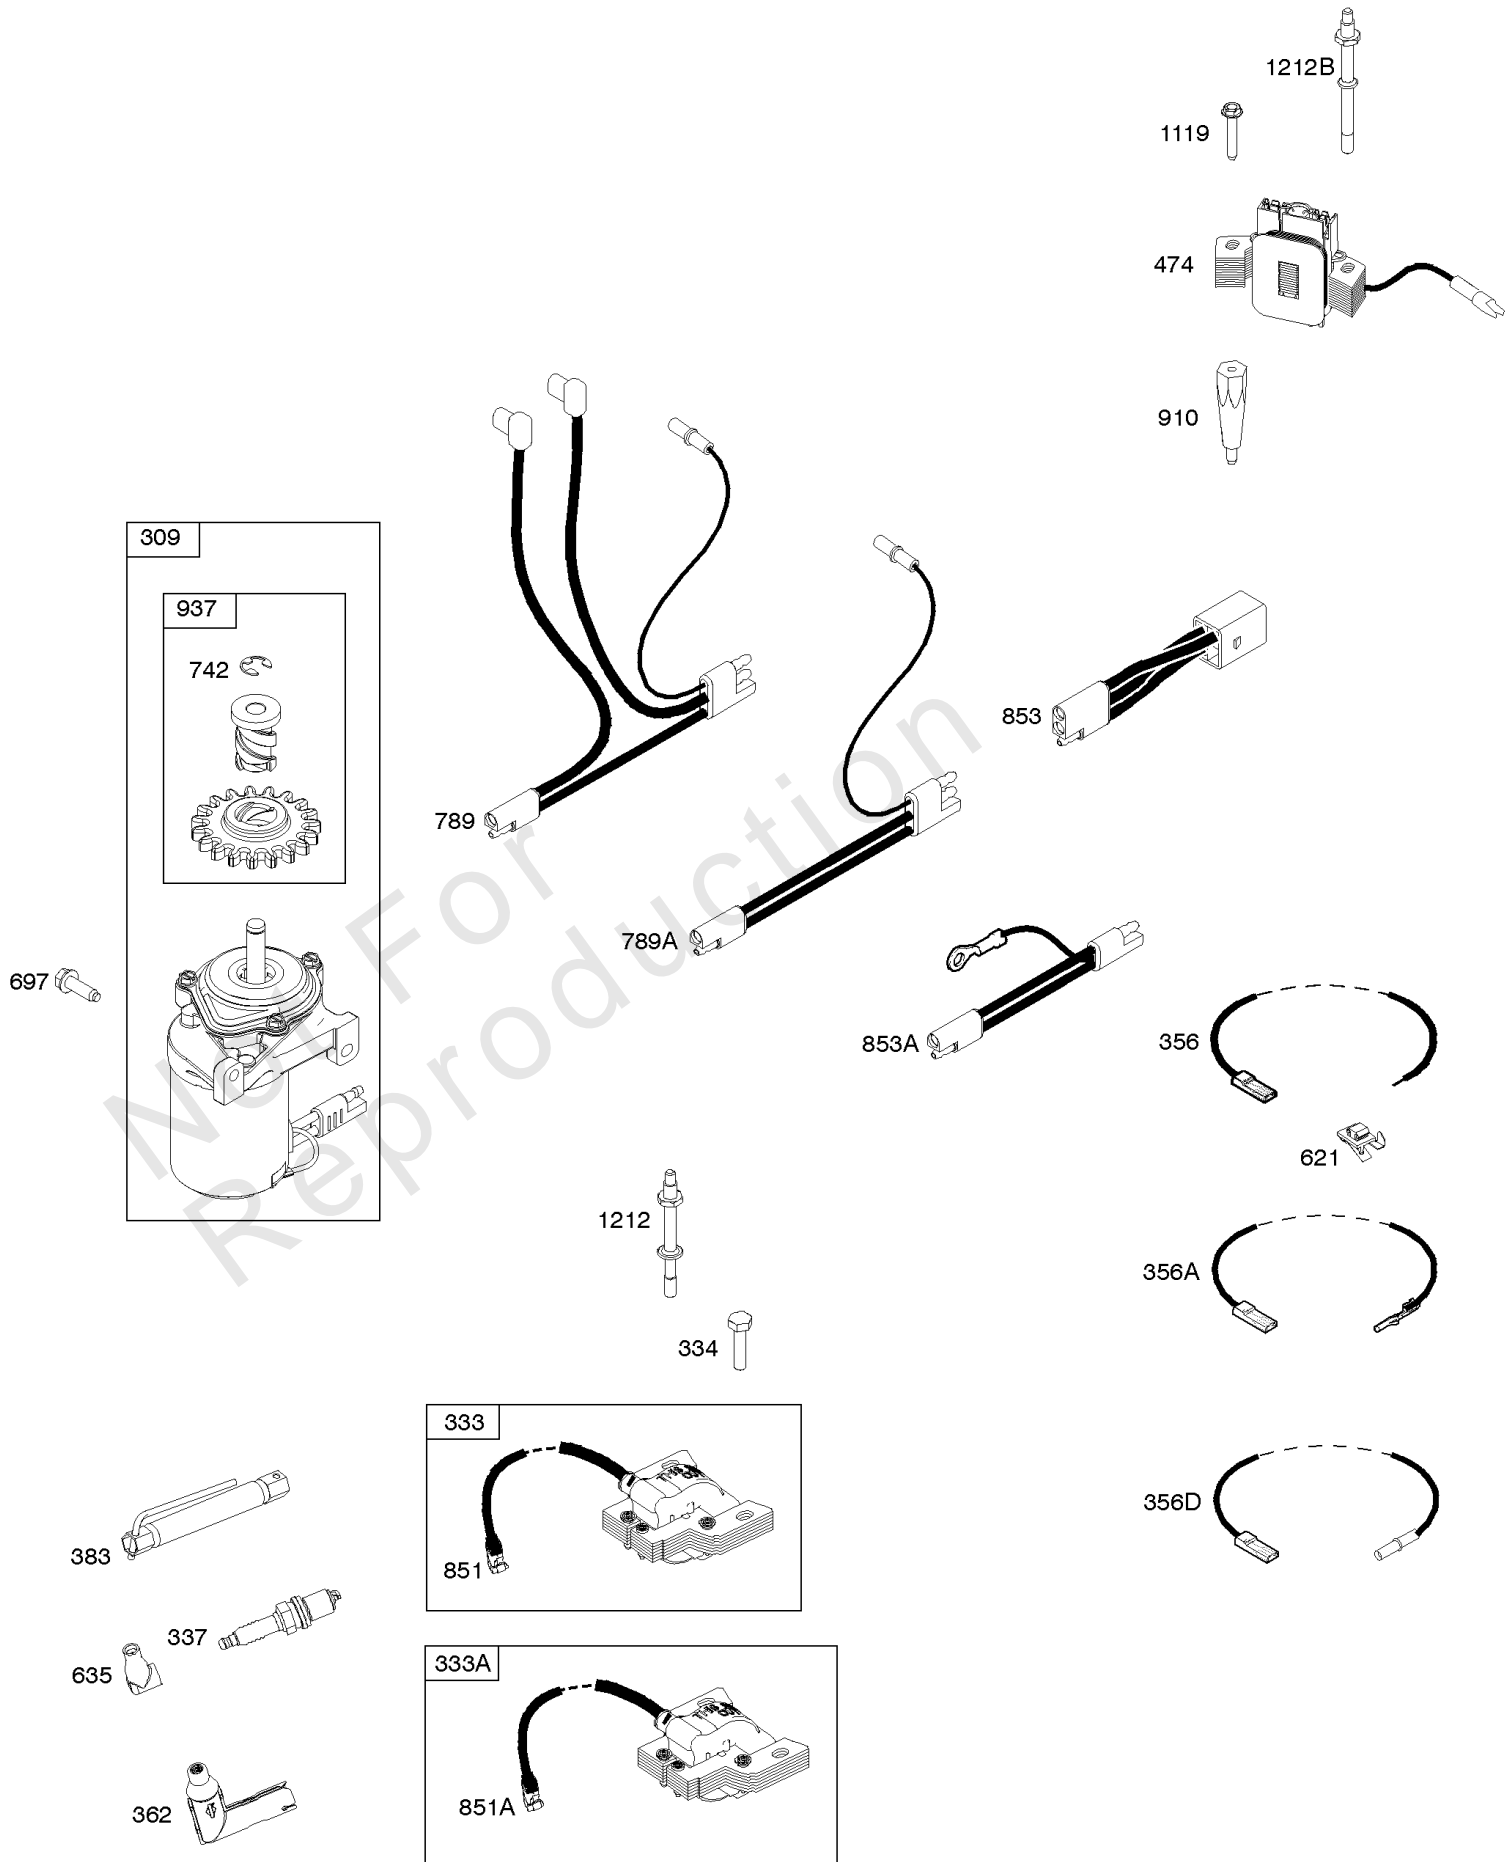

## Ignition

REF NO	PART NO	QTY	DESCRIPTION
333	796500		Armature-Magneto -(90 Degree Ignition Terminal)
334	793454		Screw -(Magneto Armature)
337	692051		Plug-Spark -(Resistor)
337	692720		PLUG, Spark -(EMS)
356	692390		Wire-Stop
362	799646		Shield-Spark Plug
383	19576S		WRENCH, Spark Plug
621	692310		Switch-Stop
635	66538S		BOOT, Spark Plug
697	691127		SCREW -(Starter Motor) (Drive Cap)
742	93941		RETAINER, E Ring
851	493880S		TERMINAL, Spark Plug
851A	692424		Terminal-Spark Plug
853A	695897		Adapter-Wire
910	796498		Stud -(Alternator)
1119	794100		Screw -(Alternator)
1212	796537		Stud -(Blower Housing)
1212B	797002		Stud -(Blower Housing) (Used With Alternator Only)

*Replacement Engine*

---

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

---

Not For  
Reproduction

