


Schaltplan RM 902/972

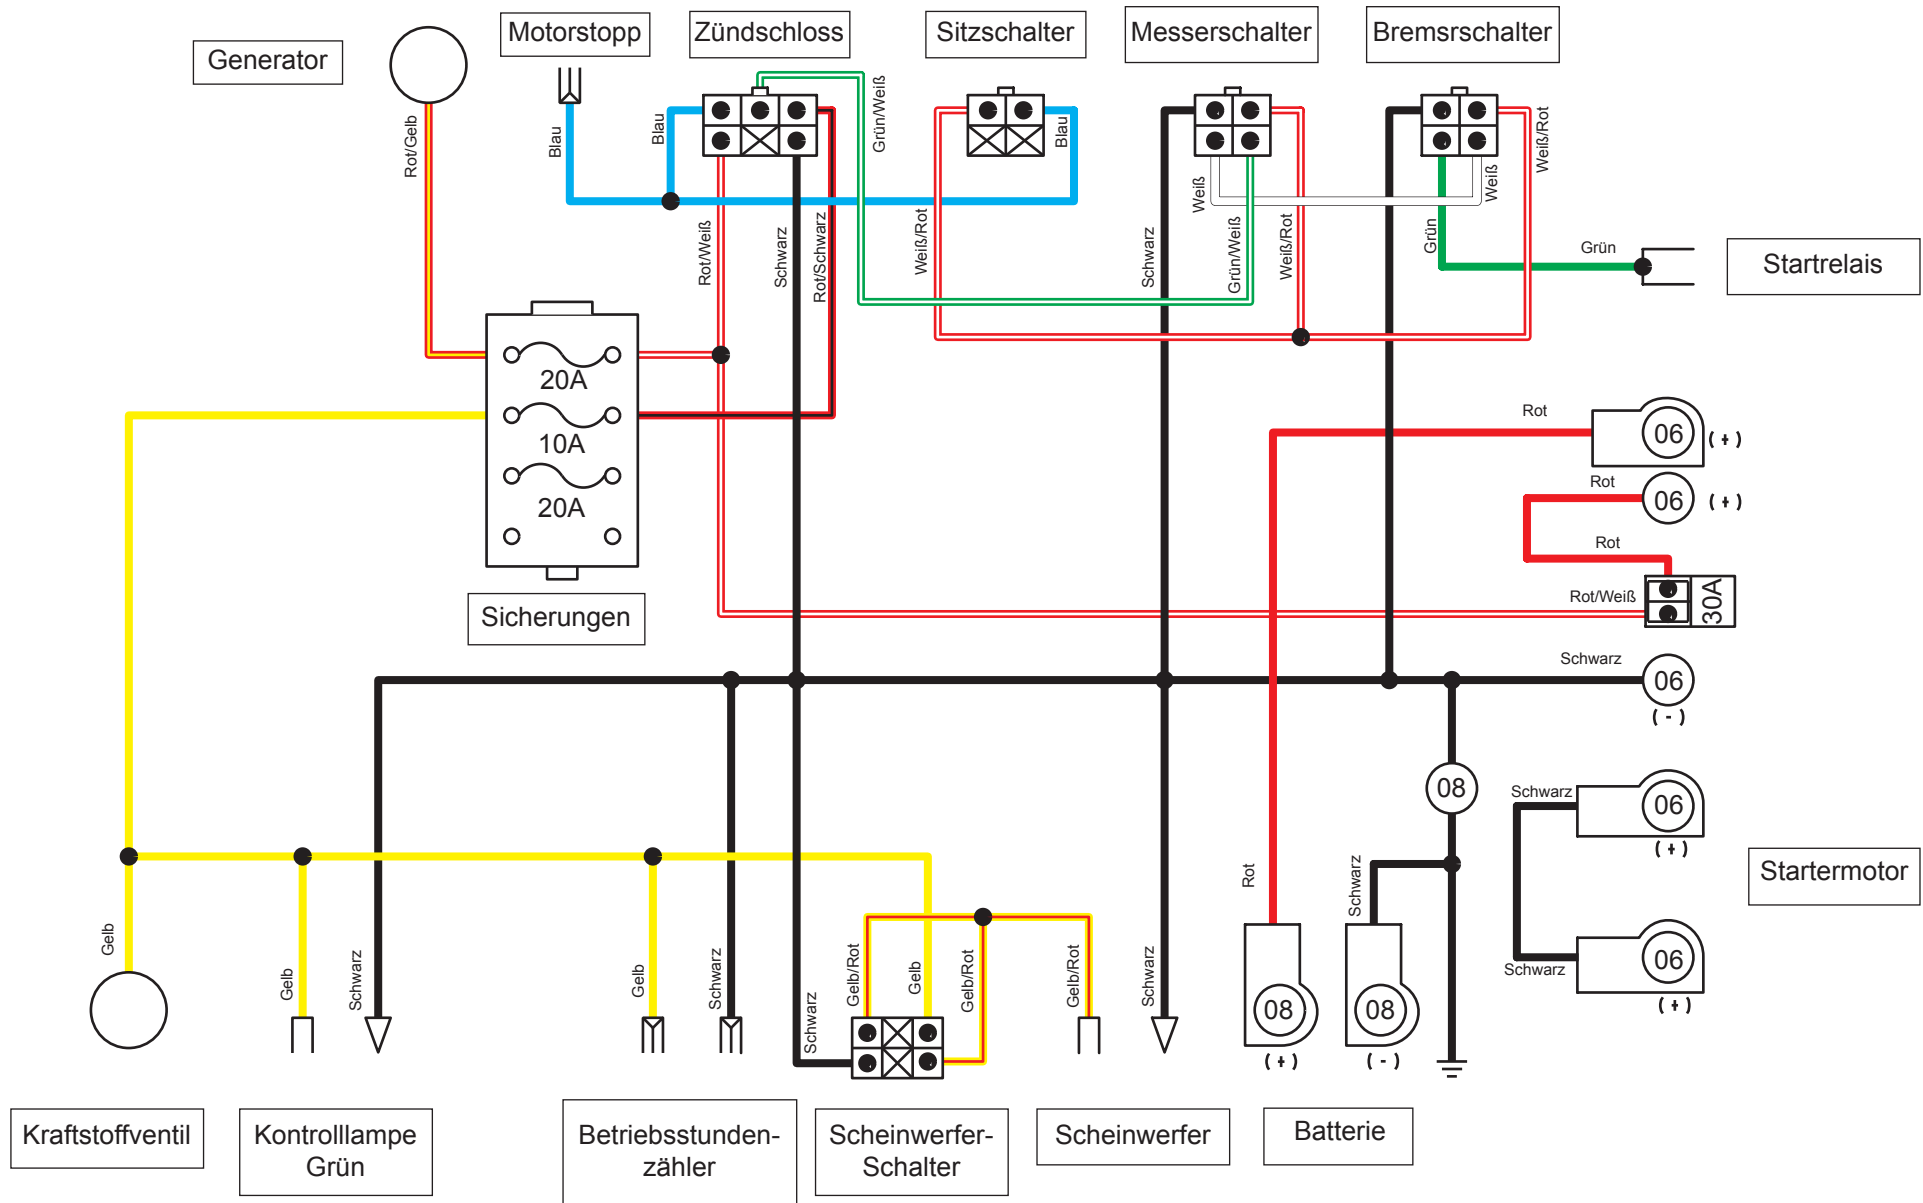

Zündschloss					
	SW	RO/WE	RO/SW	GN/WE	BL
AUS	●				●
AN		●	●		
Start		●		●	