


Notausschalter gedrückt
Error Code: 6
Error Sub-Code: 0

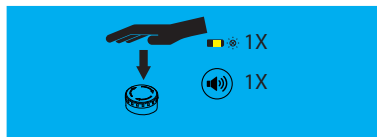


+ rpm
Error Code: 11
Error Sub-Code: 5




Float
Error Code: 11
Error Sub-Code: 9




- rpm
Error Code: 11
Error Sub-Code: 6

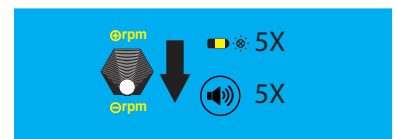


PTO auf ON
Error Code: 11
Error Sub-Code: 15

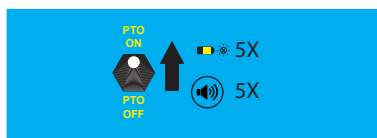


Fahrhebel nach vorne
Error Code: 9
Error Sub-Code: 1

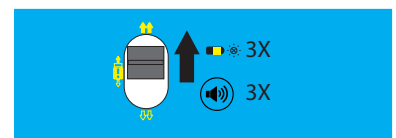


AUX 1 gedrückt
Error Code: 11
Error Sub-Code: 16

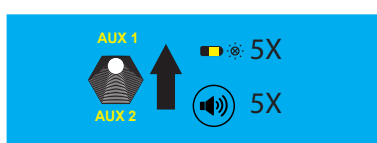


Fahrhebel nach hinten
Error Code: 10
Error Sub-Code: 1

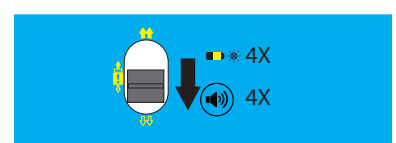


AUX 2 gedrückt
Error Code: 11
Error Sub-Code: 17

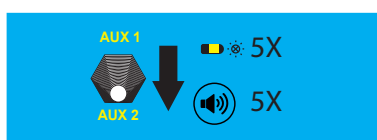


Lenkhebel links
Error Code: 10
Error Sub-Code: 2

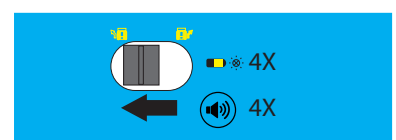


Aushebung oben
Error Code: 11
Error Sub-Code: 13

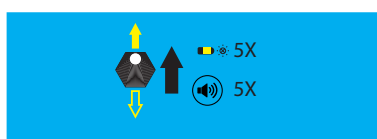


Lenkhebel rechts
Error Code: 9
Error Sub-Code: 2

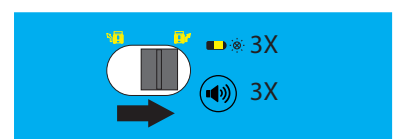


Aushebung unten
Error Code: 11
Error Sub-Code: 14

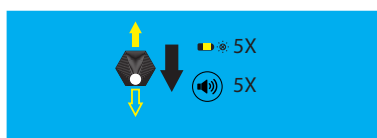

Taste Richtungswechsel
Kein Fehlercode

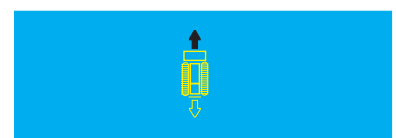

Motorstart
Error Code: 11
Error Sub-Code: 2

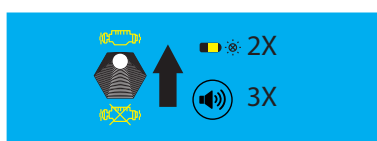

Motor AUS
Error Code: 11
Error Sub-Code: 3

