


# Front universal carrier SC- 2.2

## 9-8680-208


While mounting the carrier act upon the following pictures:

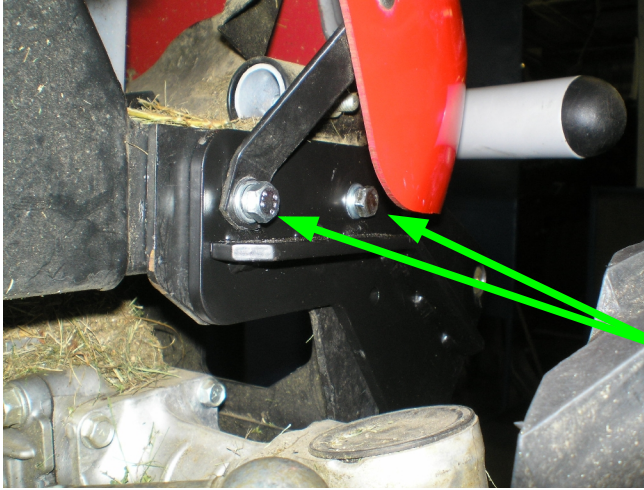


1. Only on one side demount 2 screws M8, put the carrier support plate according to the picture and fix it by the screws M8 back. Don't tighten the screws fully.





2. Into the support plate insert the upper shaft with the lifting arms and add the second carrier support plate in the same way like in the first point. Try if the shaft in the plates turns free and tighten the screws M8 on the left and right side.

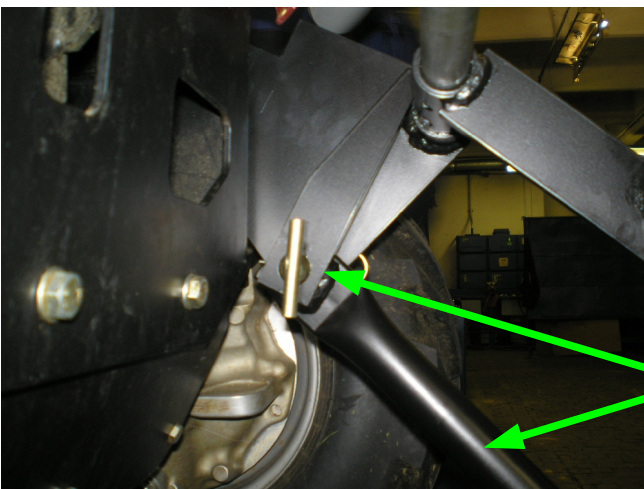


3. Into the bottom holes in the support plate mount according to the picture the lower lifting arms by the help of the enclosed pins.

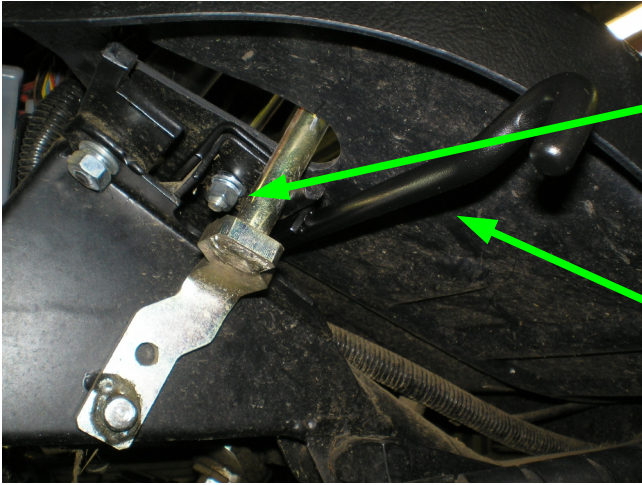

4. Unfasten the screw M8 fixing the floor and insert the safety hook between the floor and the frame holder. Tighten again the screw M8.

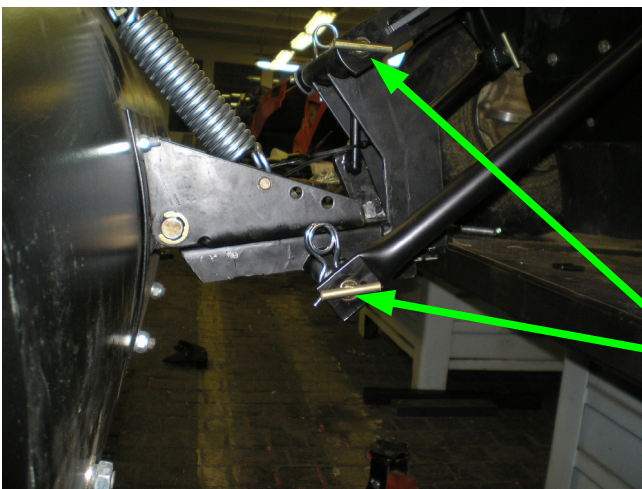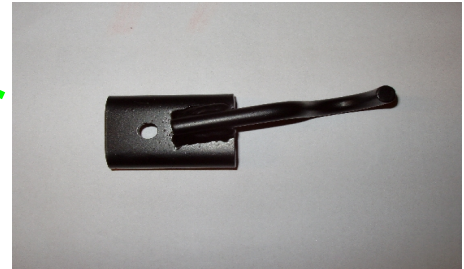

5. On the flat surface mount into the carrier the holder with the snow blade SR 110.2 and leave the snow blade lying free on the ground.

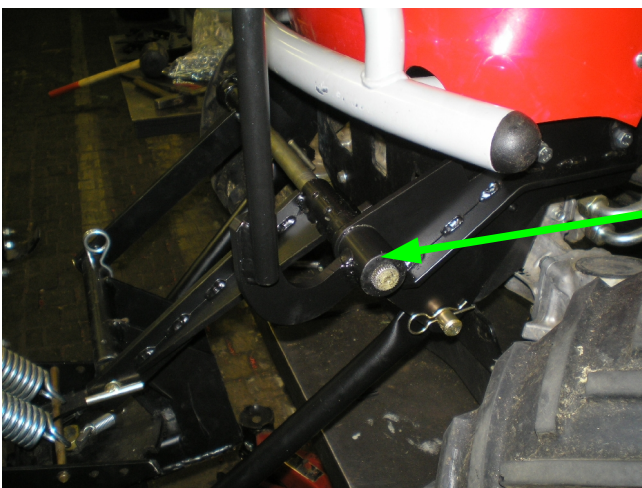

6. On the grooved end of the upper shaft slip over the lifting lever by the help of a rubber hammer so, that in the position when the snow blade is lying on the ground, the lever should be easily available from the place of the operating staff. Lock the lever by a stirrup ring. In the optimum position of the lever locked in the ring, the bottom edge of the snow blade should be approx. 12-13 cm above the road.