




Installation Instructions

Folding Molded Foam and Upholstered Arms

Note: In order to install molded foam and upholstered arms in Seat King seats, they must be ordered with arm brackets (standard on all Walker seats). The arm brackets are located approximately 9" above the bottom of the seat and along the side of the seat back frame. By squeezing the cover and foam kit along the seat back frame, you can feel a rectangular metal bracket protruding to the front of the seat.


Walker Seat with back foam and cover removed.

Arm Bracket
with Key Hole

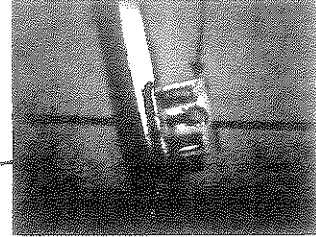


Step 1

Locate the arm bracket (as mentioned above). Once you have located the arm bracket, press inward on the seat back cover from the side to locate the keyhole located in the center of the arm bracket. As you can see in the top picture, there are two open slots (one above and one below the keyhole). It is important not to mistake the open slots as the keyhole.

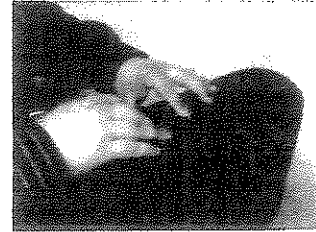

Step 2

With an exacto blade, pierce the seat cover and foam at the center point of the keyhole. Make an incision from the round portion of the keyhole through the stem of the keyhole (approximately 1.25" long). The incision must be long enough for the rod of the arm and the stop pin to slip through the cover. You may wish to trim some material (including foam) from the incision.

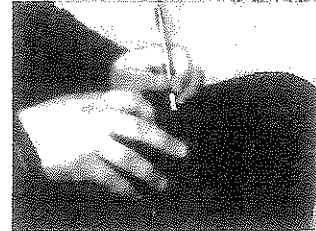

Step 3

Note: Make sure to identify left and right arms before assembly (the bottom of the arm has the cover opening with Velcro).

Slip the arm rod and stop pin through the incision with the stop pin pointing toward the back of the seat (as shown in the picture). Push the arm rod and stop pin into the keyhole.



Step 4

Press the arm inward until you are able to rotate the arm to the forward position.

