



Pièces de rechange Spare parts list


QUATRO SENIOR

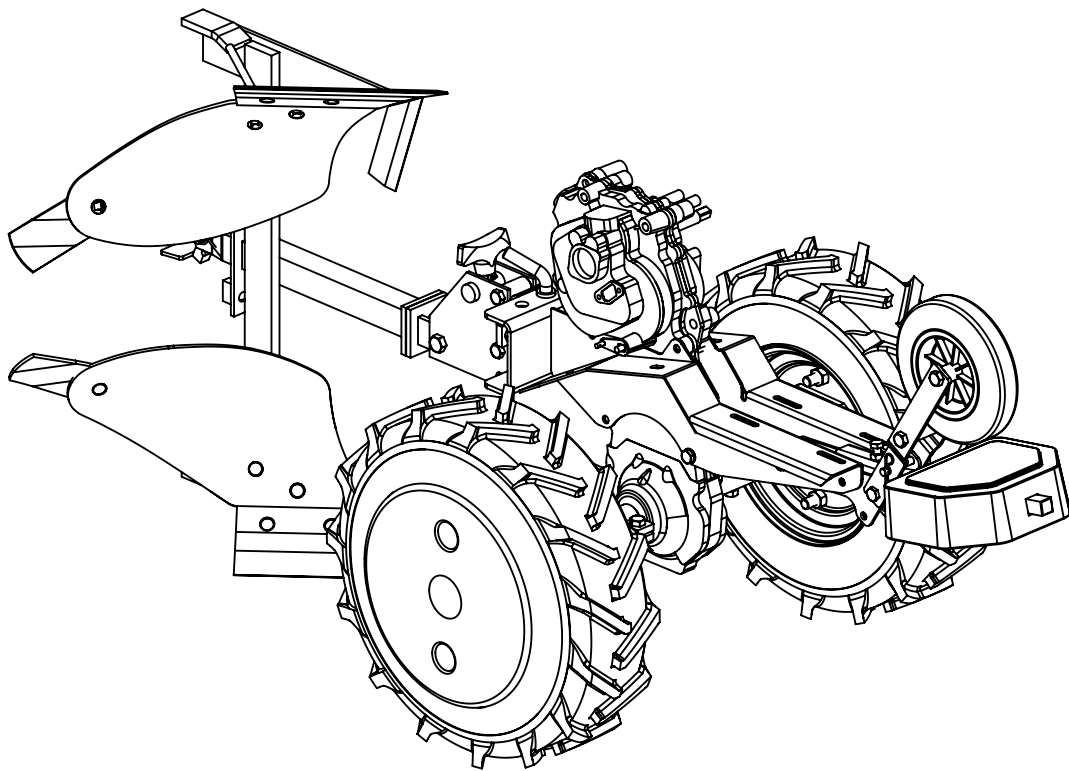

KIT LABOUR PLOUGHING TILLING KIT

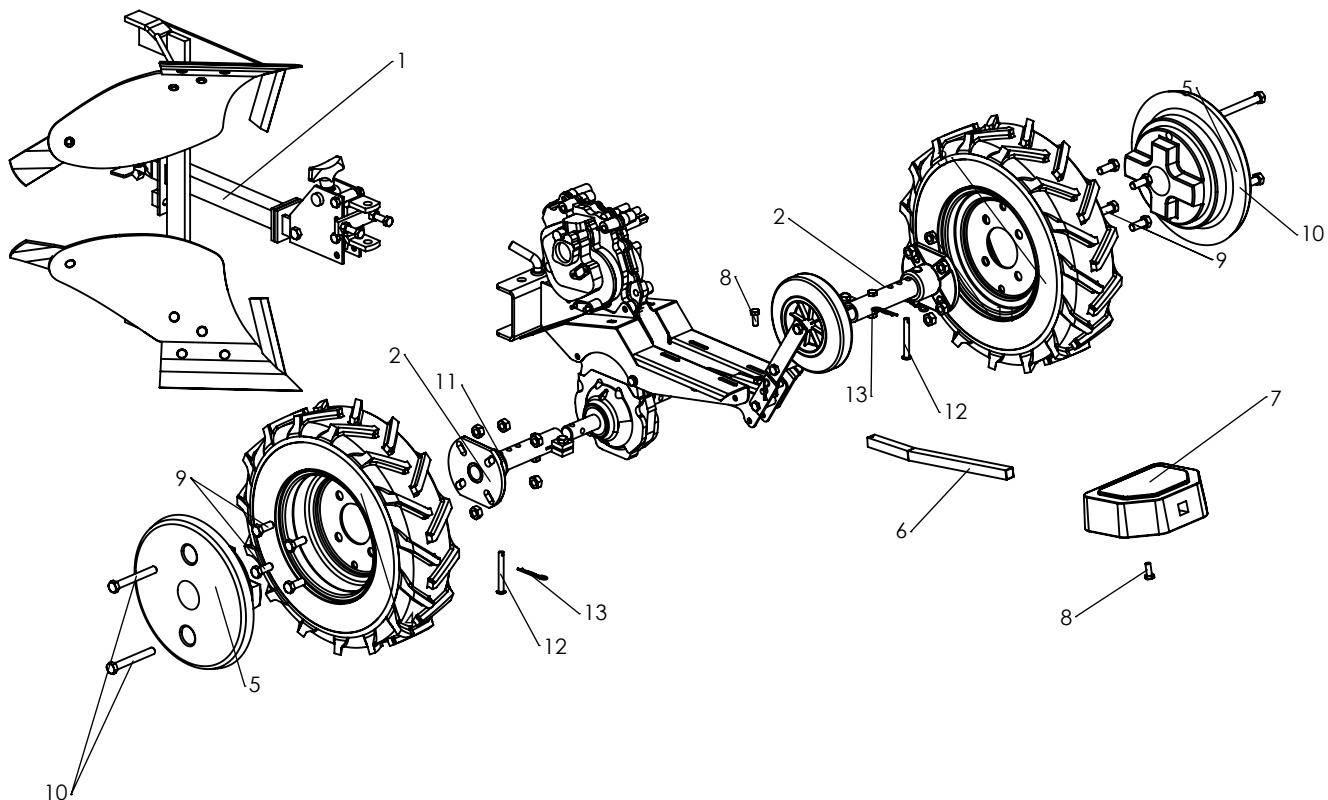

Rep N°	Ref.	Designation	Description	Qte
1	0320040003	Brabant 1/2 tour 6"	Reversible brabant 1/2 turn 6"	1
2	0302030064	Moyeux fixe (QS)	Fixed hubs (QS)	2
3	0309000007	Roue 5.00x10 gauche (pneu 4PR)	Left wheel 5.00x10 (tire 4PR)	1
4	0309000008	Roue 5.00x10 droite (pneu 4PR)	Right wheel 5.00x10 (tire 4PR)	1
5	0303000003	Masse de roue 500x10 30Kg	500x10 Wheel weight wheel 30Kg	2
6	3502020325	Support contre-poids	Balance weight support	1
7	0303000002	CONTRE POIDS AVANT 20KG MDLE97	Front balance weight	1
8	0300011008	VIS H 10 X25 Z DIN 933/8/8	Screw H M10x25 z	2
9	0300011402	VIS H 14 X 35 Z	Screw HM14x35 z	8
10	0300011404	VIS H 14 X 110/34 Z 8.8	Screw HM14x110 z	4
11	0300201401	ECROU H.U. M 14 Z	Nut HU M14z	12
12	0002080001	Goupille Ø10x80 fixation moyeu 3/4 et fixe	Pin Ø10x80	2
13	0301030002	GOUPILLE BETA3	BETA PIN BETA 3 Z	2

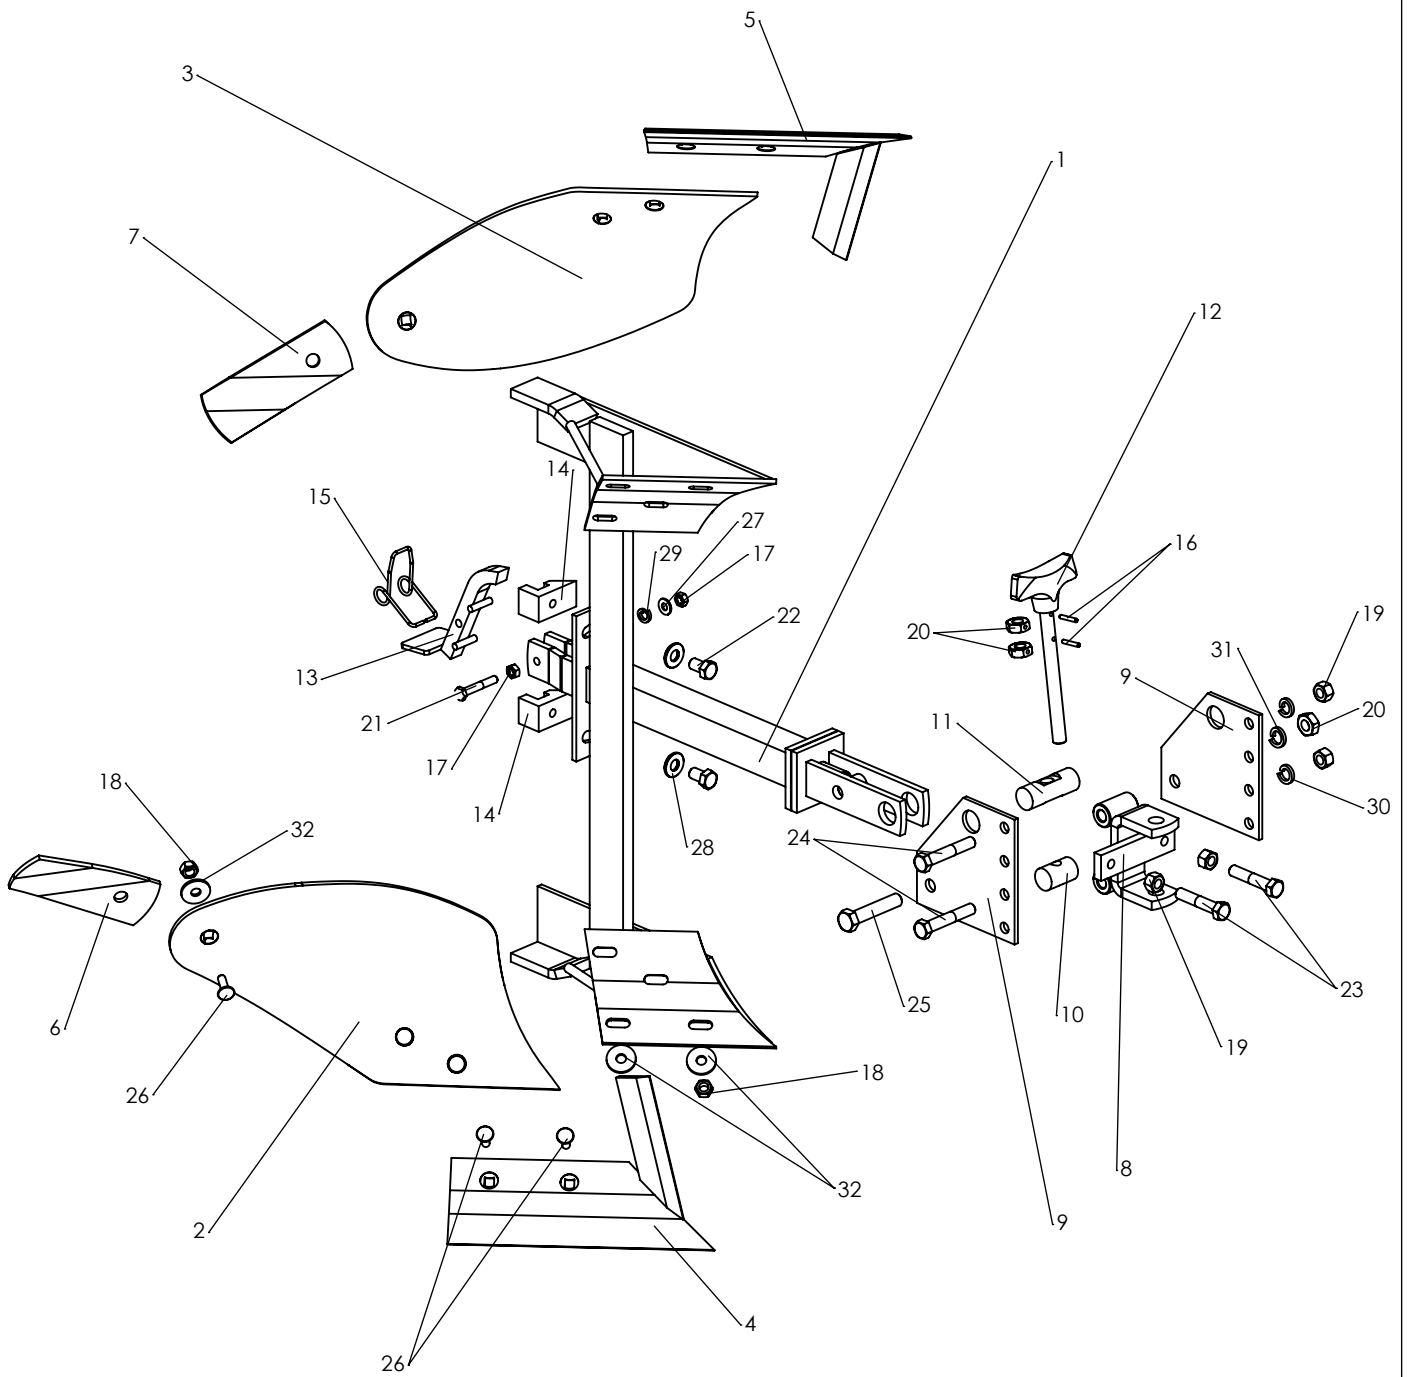

Rep N°	Ref.	Designation	Description	Qte
1	0002070008	Corps de charrue	Plough's body	1
2	0002070014	Versoir droit	Right curved blade	1
3	0002070015	Versoir gauche	Left curved blade	1
4	0002070002	Soc droit	Right blade	1
5	0002070003	Soc gauche	Left blade	1
6	0002070004	Couche lèche droit	Right deflector	1
7	0002070005	Couche lèche gauche	Left deflector	1
8	0002070009	Attelage	Connecting part	1
9	0002070010	Piece d'attelage	Connecting part piece	2
10	0002070011	Entretoise inférieure	Bottom spacer	1
11	0002070012	Entretoise supérieure	Top Spacer	1
12	0002070007	Levier de réglage	Shifting lever	1
13	0002070006	Pédale de verrouillage	Locking footswitch	1
14	0002070013	piece de verrouillage	locking piece	2
15	0002070001	Ressort verrouillage	Locking spring	1
16	0301020002	GOUPILLE HBK 4x24	Cotter-pin 4x24 HBK	2
17	0300200802	ECROU H.U. M 8 Z DIN 934/8	Nut HM8 z	2
18	0002070018	Ecrou HM 10z	Nut HM 10z	10
19	0300201202	ECROU H.U. M 12 Z DIN 934-8	NUT HM 12Z	4
20	0002070020	Ecrou F M14 BRABANT 6"	Nut F M14z	3
21	0300010833	VIS HM8x50 CL8.8 DIN931	Screw HM 8x50 Z	1
22	0002070016	Vis HM12x20 Z	Screw HM 12x20 Z	2
23	0300011207	VIS H 12x60/30 Z DIN 931/6.8	SCREW H 12x60/30 Z DIN 931/6.8	2
24	0300011209	VIS H M12x70 Z cl 8.8 ISO4017	Screw HM 12x70z	2
25	0002070021	Vis HM14x70 z	Screw HM14x70 z	1
26	0002070017	VIS 9x25 TETE FRAISEE COLLET	Screw TF collet carré 9x25 D608	10
27	0300400802	RONDELLE PLATE M 8X18X1.5 Z	PLATE WASHER M 8X18X1.5 Z	1
28	0300401201	RONDELLE PLATE M 12X27X2.5 Z	PLATE WASHER M 12X27X2.5 Z	2
29	0002070025	Rondelle Grower M8	Grower washer M8	1
30	0300451201	RONDELLE GROWER 12 Z	Grower washer M12	2
31	0002070022	Rondelle Grower M14	Grower washer M14	1
32	0002070019	Rondelle Ø31x10.5x3	Washer Ø31x10.5x3	10